

DanAm Air Vac

Removes foreign objects from wet paint coat

Part No. DAA1001K

Operating Instructions

How to use your DAA Vac

1. Install your style of nipple into the ball valve (2)
2. Place a clear vacuum tip (5) on the black tip mount and give it a firm push and twist. There is no need to worry about the tip falling off as the suction will keep it on.
3. Connect air hose to nipple.




Always point the DAA Vac away from the painted object, your body or any person.

Never touch the blowing end of the DAA Vac to any part of your body.

4. The operating pressure is 20-50 psi.
The max psi for optimum suction is 40-50 psi (little to no added suction value at higher psi, extreme pressure may cause suction reversal), start the suction by opening the ball valve and adjust to your needs.
5. Carefully and gently touch the tip to the intruder.



Never stick the tip in thinner or solvent and suck it through the tool.

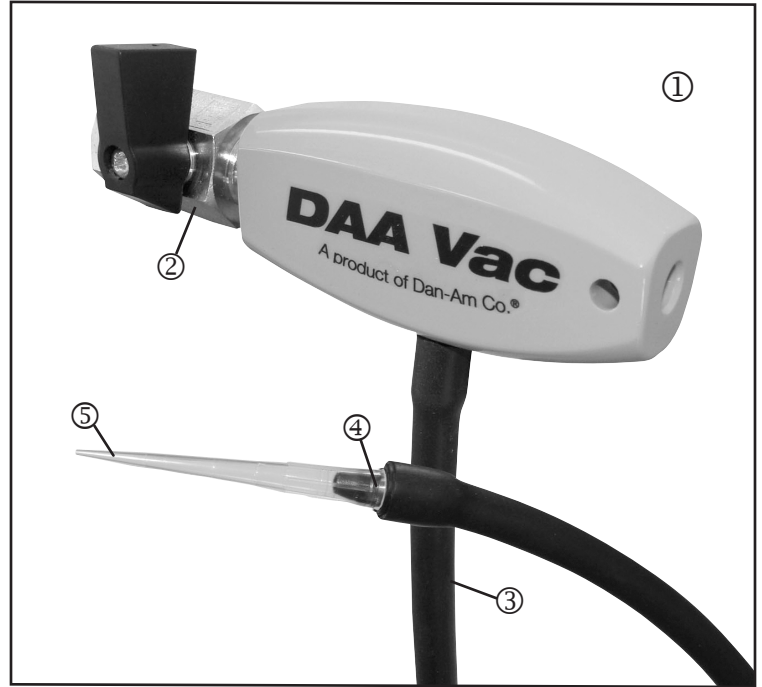


Part Number

Description

① DAA1001K	DanAm Air Vac kit, cpl.
② DAA1005V	Ball valve
③ DAA1003H	Black suction hose, 4'
④ DAA1006BT	Tip, black hose, ea
⑤ DAA1002T	Clear tips, disposable, 20 pk
⑥ DAA1004D	Dropper, disposable, 5 pk

DAA Vac Accessory

⑥

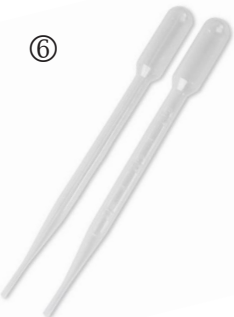

Disposable dropper no. DAA1004D is used to fill the void after removing the intruder from the clear coat. 6" long

Suck some paint in the dropper, place a drop of paint in the void and let it smooth out to the surrounding coat.

For a smaller controlled drop, place a clear vacuum tip (5) on end of dropper.

Part no. **DAA1004D**, pk of 5

DanAm Air Vac is a product of

Dan-Am Co.[®]

*The Exclusive Independent Distributor of
SATA Products in the US & Puerto Rico*

One Sata Drive, Spring Valley, MN 55975
800-533-8016 • www.DanAmAir.com